



## Approach with Advance ONLY

Length: As big as possible  
Speed (optional): 30 - 100mph  
ETA: Get from Detection Form

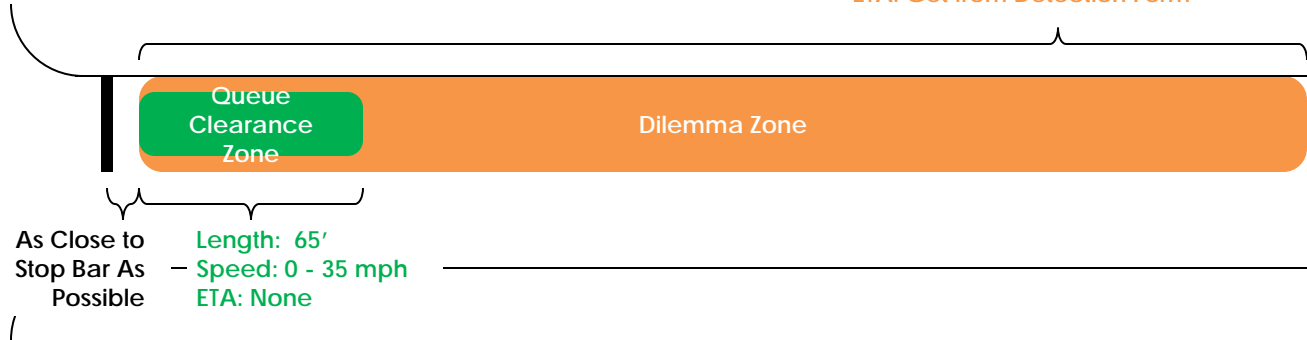


## Approach with Advance AND Stop-Bar Detection

Length: As big as possible  
Speed (optional): 30 - 100mph  
ETA: Get from Detection Form

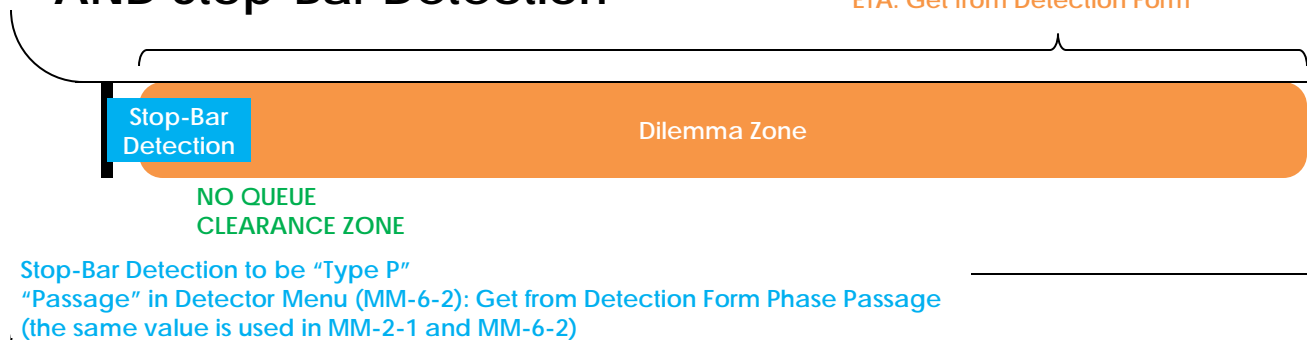

## Approach with Advance Warning System (AWS)

Length: Get from AWS Form  
Speed: Get from AWS Form  
ETA: Get from AWS Form

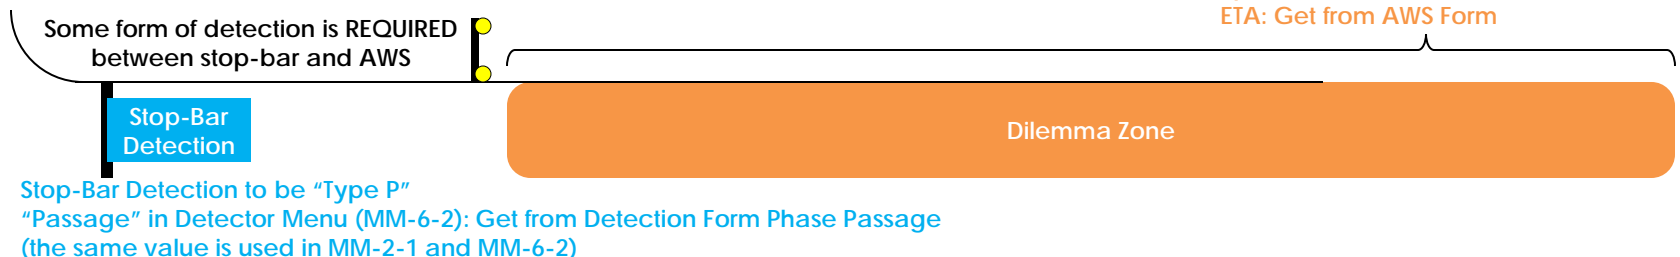

Some sites have a second Advance mounted at the stop-bar instead of stop-bar detection. In these cases, put ONLY a queue-clearance zone in this second advance. PCD count detector may be placed in either Advance.